

Paymark EFTPOS Pax One-Piece S800



CONTENTS

TERMINAL HARDWARE	
S800 Countertop EFTPOS	3
Paper Rolls	2
Other Accessories	2
SETTING UP YOUR EFTPOS EQUIMENT	
S800 Countertop EFTPOS	5
TRANSACTIONS OVERVIEW	e
Contactless Transactions	ć
Electronic Offline Vouchers	E
Manual (standalone) EFTPOS	-
Transaction Types	7
Purchase	3
Purchase with Signature	3
Cash Out	3
Purchase + Cash Out	ç
MOTO Purchase	ç
Refund	10
MOTO Refund	10
Pre authorisation	1
Finalise authorisation	1
Cancel Auth	12
Check card status	12
ALPHA Menu	13
Payment Application Menu	13
Common Admin Functions	14
Manual Logon	14
Manual Settlement	14
Print (Shift) Totals	14
Stored Totals	14
Settlement Inquiry	14
Reprint Last Receipt	14
Send Offline Transactions	14
MERCHANT and COMMUNICATION SETTINGS	15
Print Current Configuration	15
Configuration Update	15
Network Comms Check	15
Connection Icons	15
App Manager	16
Changing Comms Settings	16
System Settings	16
TMS	16

CONTACT

For EFTPOS terminal related enquiries and support, or to report an issue with your EFTPOS terminal, contact Smartpay Technical Helpdesk on **0800 476 278** or email **customer.service@smartpay.co.nz**

TERMINAL HARDWARE


S800 Countertop EFTPOS

Smartpay Pax S800 EFTPOS provides a simple, secure and robust countertop payment terminal that connects to mains power. The S800 connects to the Internet to process transactions via your Broadband/Fibre or Dial-up connection.


Which Plugs Go Where?

On the back of your S800 EFTPOS terminals there are ports available for plugging in the required cables. These plugs are labeled but can be difficult to read. For ease of use we have included diagrams and descriptions below.

LAN/RS232B	An Ethernet cable should be plugged in here to connect the terminal to a Broadband/Fibre Internet connection.
LINE	If you use a dial-up Internet connection the phone cable should be plugged in here.
POWER	The power cable supplied with your terminal plugs in here. Plug the other end into your wall socket or a power strip.
RS232A	If you are using a Keylink interface to your ECR/POS system connect the Keylink cable or accessory supplied here.
PINPAD	Plug the S300 PINpad in here for two-piece EFTPOS setup.

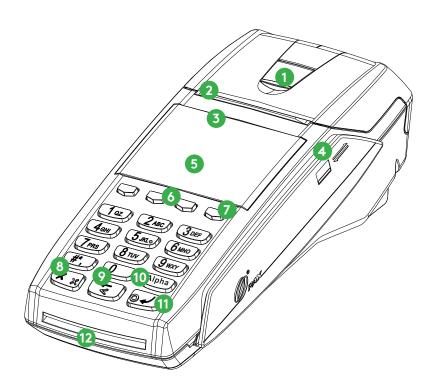

- 1. Printer cover release
- 2. Paper cutter
- 3. Contactless LEDs
- 4. Card swipe reader
- 5. Colour display screen
- 6. Page up/down arrows
- 7. Menu key
- 8. Cancel/Power On/Off key
- 9. Clear/Back/No key
- 10. ALPHA Menu key
- 11. Enter/Accept/OK key
- 12. Chip card slot

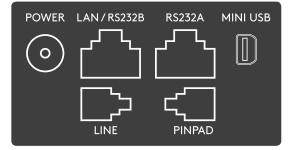

Paper Rolls

S800 terminals use standard 57mm (w) x 47mm (diameter) thermal paper rolls

Replacing printer paper:

- 1. Engage printer cover release flap to open printer bay
- 2. Remove existing roll core and place new roll in printer well, the tongue of paper should be feeding up from underneath and out towards the top of the terminal
- 3. Pull out tongue of paper so it is coming out of feeder and close the printer cover.

Other Accessories

- Swivel counter stand
- Wetcovers
- Cleaning cards

To order paper rolls or other accessories please contact Smartpay on **0800 476 278** or visit our website **smartpay.co.nz/store**



SETTING UP YOUR EFTPOS EQUIPMENT

Please read the Getting Started Letter that is provided with your Smartpay EFTPOS equipment. Our technical help desk team *(THD)* can be contacted if you would like any assistance and to release the security key and perform your initial Logon.

S800

STEP ONE: Plug in

You might find it easier to have base unit face down on the counter to do these steps

- 1. Put the round end of the power cable into the **POWER** socket on the terminal.
- If you're using a broadband or fibre internet connection, plug your ethernet cable into the LAN/RS232B port If you use a dial-up internet connection or dial-backup, plug the phone cable into the LINE port
- 3. Tuck the cables into the recessed cable tidy guides on the bottom of the base unit
- 4. If you're using a separate **PIN PAD** (S300), plug this into the **PIN PAD** port.

STEP TWO: Switch on

- 1. Plug in the power supply to the electrical power socket.
- 2. Turn on the power at the wall, then push and briefly hold the 🔱 button on the terminal. The terminal will go through a start up sequence.

STEP THREE: Connect to the Paymark network

- 1. Your terminal arrived with a printed receipt still attached. If the receipt is short with your business name on it, you are now all ready to go.
- 2. If not, you'll need to call us before you can transact. Call our technical support team on 0800 476 278 and we will get your ready to take payments.

CONTACTLESS TRANSACTIONS


Smartpay EFTPOS terminals can accept contactless payment cards and smart devices. Merchants can have contactless acceptance enabled or disabled through their Merchant bank. If contactless payment functionality is enabled, then once the transaction value is entered the Paywave/Paypass/tap-and-go card PRESENT option will be offered automatically for valid transaction types.

The terminal prompts the customer to **PRESENT/INSERT/SWIPE** their card. Merchants should offer the terminal to their customer to complete the transaction; instructing them *(if required)* to present their card over the screen where the blue light is flashing. It is best security practice for the customer to perform these steps themselves. The merchant should not take the customers payment card unless necessary.

CREDIT CARD is the default account for all contactless transactions. Account selection is not required. For transactions over the industry prescribed limit currently (*NZD*\$80) the customer will be prompted to enter their PIN to complete the transaction.

This is the symbol for contactless transactions. The symbol will be displayed on the **PRESENT CARD** screen and coloured LED boxes flash along the top of the screen:

BLUE LED = Awaiting card presentation BLUE + YELLOW LED = Card presented

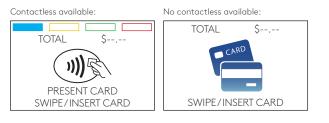

BLUE + YELLOW + GREEN LED = Card read successful RED LED = Card read failed

ELECTRONIC OFFLINE VOUCHERS

Electronic Offline Voucher *(EOV)* enables your business process EFTPOS transactions if your terminal has gone offline. EOV is not designed to function as a secondary connectivity option. EOV allows for emergency processing capability when unforeseen situations such as a loss of network or connectivity occur. To find out more about EOV, contact the Paymark Customer Care Centre on 0800 729 627.

How does it work?

If the EFTPOS terminal encounters an issue connecting to the Paymark network, it will automatically revert to offline mode after two failed transactions. "EFTPOS OFFLINE" will be displayed on terminal screen. Your terminal can operate in EOV for up to 36 hours or store up to 99 EOV (*to maximum allowed value*) which ever comes first. Once a successful connection has been made with Paymark, the terminal will automatically send stored offline transactions through for processing.

All EOV transactions require the customer signature on the Merchant EFTPOS receipts instead of PIN verification. Merchants must keep all signed Merchant Receipts to verify EOV transactions. Refund and Cash Out transaction types are not supported in EOV mode.

Most customers will automatically be enabled for offline mode but it can be enabled or disabled by your merchant bank.

Manual (standalone) EFTPOS

- EFTPOS terminal is not connected to POS
- The idle screen displays transaction options
- To start a transaction the operator selects required transaction type and enters an amount

IDLE SCREEN S800

dd/mm/yy	time
----------	------

smartpay

PGDWN

- 1. PURCHASE
- 2. CASH
- 3. PUR/CASH
- 4. REFUND
- PGUP

- To start any of the main transaction types select the corresponding number
- To tab between the transaction type screens press **up/down ARROW** keys
- Press **MENU** key for EFTPOS configuration, diagnostics and admin functions.
- Press ALPHA key to access QUICK MENU

Transaction Types

PURCHASE	Standard Purchase/Sale transaction using an EFTPOS/CREDIT/DEBIT card	
CASH	Cash Out transaction using an EFTPOS/DEBIT card	
PUR/CASH	Combined Purchase/Sale and Cash Out transaction using an EFTPOS/DEBIT card	
REFUND	Refund transaction using an EFTPOS/CREDIT/DEBIT card Merchants requiring refund functionality will need to have this enabled through their Merchant bank. The Merchant bank will issue your Merchant Refund Card.	
AUTH	Hospitality transaction type to request pre-authorisation of funds on CREDIT/DEBIT card <i>(usually for room or vehicle hire)</i> . Hospitality Authorisation now offers Debit Account selection. Processing of this transaction is dependent on Issuer approval. All hospitality functionality must be approved by Merchant bank before it can be enabled on terminal.	
CANCEL AUTH	Transaction type used to removed a stored AUTH that is no longer required by the merchant.	
FINALISE	Hospitality transaction type to complete (<i>Finalise</i>) a previously stored AUTH transaction on a CREDIT/DEBIT card (<i>usually for room or vehicle hire</i>).	
PUR/TIP	Hospitality transaction type to initiate a Purchase transaction type with Signature Receipt Tipping enabled. (only some cards will support this option - if the card does not support Signature then the transaction will cancel and operator will need to restart as Purchase with/without instant tip-on-terminal) Signature tipping now offers ALL Account selection. Processing of this transaction is dependent on Issuer approval. Only some schemes accept Debit Signature.	
ADD TIP	Hospitality transaction type to add tip amount to a stored PUR/TIP transaction. All PUR/TIP Signature Receipt Tip transactions MUST be uploaded to Paymark manually at the end of day. See Tipping User Guide for further information.	
CHECK CARD STATUS	Card Status Check can be used to check if a card is valid. It is not a pre-authorisation and does not guarantee any funds.	

Purchase

- 1. Operator selects **PURCHASE** and types in purchase amount
- 2. Press ENTER and terminal prompts customer to PRESENT/ INSERT or SWIPE CARD
- 3. Operator presents EFTPOS terminal to customer
- 4. Customer taps, inserts or swipes card
 - a. Insert or swipe customer follows screen prompts to select account and enter PIN
 - b. Tap customer follows screen prompts if required
- 5. EFTPOS terminal displays **ACCEPTED** or **DECLINED** result
- 6. EFTPOS receipt will be offered (depending on receipt print/prompt settings)
- 7. EFTPOS terminal returns to idle screen ready for next transaction

Purchase with Signature

In some cases, the customer may be able to select **ENTER** instead of using their PIN. If this happens the Merchant Receipt will print with a space for the customer to sign in. The terminal will require the operator to verify the customer signature to complete the transaction.

Your merchant agreement states you should keep a copy of your signed Merchant Receipts. These can be used to verify the transaction should it be disputed at a later date.

Cash Out

(Contactless not available with cash out transaction type)

- 1. Operator selects **CASH** and types in cash-out amount
- 2. Press ENTER and terminal prompts customer to INSERT or SWIPE CARD
- 3. Operator presents EFTPOS terminal to customer
- 4. Customer inserts or swipes card
- 5. Customer follows screen prompts to select account and enter PIN
- 6. EFTPOS terminal displays **ACCEPTED** or **DECLINED** result
- 7. EFTPOS Receipt will be offered (depending on receipt print/prompt settings)
- 8. EFTPOS terminal returns to idle screen ready for next transaction

Purchase + Cash Out

(Contactless not available with cash out transaction type)

- 1. Operator selects **PUR/CASH**
- 2. Operator types in purchase amount Press ENTER
- 3. Operator types in cash-out amount Press ENTER
- 4. EFTPOS terminal will prompt customer to INSERT or SWIPE CARD
- 5. Operator presents EFTPOS terminal to customer
- 6. Customer inserts or swipes card
- 7. Customer follows screen prompts to select account and enter PIN
- 8. EFTPOS terminal displays **ACCEPTED** or **DECLINED** result
- 9. EFTPOS receipt will be offered (depending on receipt print/prompt settings)
- 10. EFTPOS terminal returns to idle screen ready for next transaction

MOTO Purchase

Manual card entry or MOTO functionality can be enabled for merchants who process telephone or mail order sales. MOTO should only be used in situations where cardholder authorisation is given for the transaction and the physical credit card is not present to be used at the terminal.

- 1. Operator selects **PURCHASE** and types in purchase amount
- 2. Press ENTER and terminal prompts user to PRESENT/ INSERT or SWIPE CARD
- 3. Operator should press ENTER
- 4. Operator types in 16-digit card number Press ENTER
- 5. Operator types in card expiry date [mm/yy] Press ENTER
- 6. Operator is prompted to enter card CSC Select YES or NO and follow screen prompts
- 7. Operator selects appropriate **MOTO TYPE** option

7a. If Prompted "CARD ON FILE?" - Select appropriate YES/NO answer

7b. If prompted "First Use?" - Select appropriate YES/NO answer

- 8. Operator selects **CRD** account type
- 9. EFTPOS terminal displays **ACCEPTED** or **DECLINED** result
- 10. EFTPOS Receipt will be offered (depending on receipt print/prompt settings) you should always print a copy of MOTO receipts
- 11. EFTPOS terminal returns to idle screen ready for next transaction

Refund

Merchants are enabled for refund transactions and provided a Merchant Refund Card by their merchant bank. Merchants should contact their bank to request this service and the card.

- 1. Operator selects **REFUND** types in refund amount
- 2. Press ENTER and terminal prompts for MERCHANT REFUND CARD
- 3. Operator swipes **MERCHANT REFUND CARD** and enters **REFUND PIN**
- 4. Key in refund amount and press ENTER then prompt customer to PRESENT/INSERT or SWIPE CARD
- 5. Operator presents EFTPOS terminal to customer
- 6. Customer taps, inserts or swipes card
 - a. Insert or swipe customer follows screen prompts to select account and enter PIN
 - b. Tap customer follows screen prompts if required
- 7. EFTPOS terminal displays **ACCEPTED** or **DECLINED** result
- 8. EFTPOS Receipt will be offered (depending on receipt print/prompt settings)
- 9. EFTPOS terminal returns to idle screen ready for next transaction

MOTO Refund

MOTO Refunds can be performed in the same way as MOTO purchase. Merchant should select Refund transaction type and use their Merchant Refund Card. The amount being refunded should be credited back to the card used for the original purchase. Merchants should contact their bank to request this service and the card.

Pre Authorisation

(Contactless not available with pre authorisation)

- 1. Operator selects **AUTH**
- 2. Terminal will prompt merchant to enter a **TRANSACTION REFERENCE** (optional free text field used to search for the transaction later)
- 3. Press ENTER
- 4. Key in AUTH amount and press ENTER
- 5. EFTPOS terminal will prompt customer to **INSERT** or **SWIPE CARD** (for card-not-present transaction you can perform a manual entry, by pressing **ENTER** at this stage)
- 6. Operator presents EFTPOS terminal to customer
- 7. Customer inserts or swipes card
- 8. Customer follows screen prompts to select account and enter PIN or Press ENTER for signature verification
- EFTPOS Receipt for merchant and customer will print (Merchant must keep their receipt copy)
- 10. EFTPOS terminal returns to idle screen ready for next transaction

Finalise Transaction

- 1. Operator selects **FINALISE** (If there are no stored pre-auth transactions the terminal will display no stored auth transactions)
- 2. Terminal will prompt merchant to SEARCH STORED TXNS
 - > TRANS NUMBER = found on the receipt
 - > CARD NUMBER = merchant will need the card that did the original pre-auth transaction.
 - > AUTH ID = found on the receipt
 - > TRANS AMOUNT = found on the receipt
 - > TRANS REFERENCE = found on original AUTH receipt at the top
- 3. Terminal will display all matching stored pre-auth
- 4. If there is more than one merchant shoul select the correct one to continue.
- 5. Terminal will display $\ensuremath{\mathsf{ORIGINAL}}$ amount and prompt for $\ensuremath{\mathsf{FINAL}}$ amount entry.
- 6. Key in **FINAL** amount and press **ENTER**
- 7. Confirm **ORIGINAL** and **FINAL** amounts displayed press **ENTER**
- Print out merchant & customer copy of the **FINAL** receipt for merchant/customer record (merchant must keep their receipt copy)

CANCEL AUTH

- Operator selects CANCEL AUTH (If there are no stored pre-auth transactions the terminal will display no stored auth transactions)
- 2. Terminal will prompt merchant to **SEARCH STORED TXNS**
 - > TRANS NUMBER = found on the receipt
 - > CARD NUMBER = merchant will need the card that did the original pre-auth transaction.
 - > AUTH ID = found on the receipt
 - > TRANS AMOUNT = found on the receipt
 - > TRANS REFERENCE = found on original AUTH receipt at the top
- 3. Terminal will display all matching stored pre-auth
- 4. If there is more than one merchant shoul select the correct one to continue.
- 5. Terminal will display original pre-auth amount and prompt merchant to confirm CANCEL AUTH
- 6. Confirm CANCEL AUTH transaction displayed press ENTER
- 7. Print out merchant & customer copy of the **PREAUTH CANCELLATION** receipt for merchant/customer record (merchant must keep their receipt copy)

CHECK CARD STATUS

- 1. Operator Selects CHECK CARD
- 2. EFTPOS terminal will prompt to **PRESENT / INSERT / SWIPE CARD**
- 3. Customer follows screen prompts to select account (credit only) and enter PIN
- 4. EFTPOS terminal displays **ACCEPTED** or **DECLINED** result
- 5. EFTPOS receipt will be offered (depending on receipt print/prompt settings)

ALPHA Menu

You can quickly perform common functions by pressing the **ALPHA** key + required number key

The **ALPHA** menu provides a simple a two-key press process to perform up to five common tasks. If you have a multimerchant terminal (*if you have multi-merchant setup*, *select the merchant after these shortcuts*).

The default menu setting is:

- 1. ALPHA >1 LOGON
- 2. ALPHA > 2 REPRINT RECEIPT
- 3. ALPHA > 3 SETTLE INQUIRY
- 4. ALPHA > 4 SETTLE CUTOVER
- 5. ALPHA > 5 PRINT CONFIG

Payment Application Menu

^{time} MAIN MENU

- 1. MERCHANT
- 2. TERMINAL

DATE

- 3. CONFIG
- 4. CSE
- 5. DIAGNOSTICS
- 6. SECURITY

PG DN

^{time} MAIN MENU

1. SECURITY

DATE

PG UP

Press **MENU**

- 1. Scroll between the menu pages press up/down ARROW keys
- 2. Press number to select option
- 3. Press CLEAR or CANCEL to go back

Common Admin Functions

Manual Logon	Press MENU > MERCHANT > ADMIN > LOGON
Reprint Last Receipt	Press MENU > MERCHANT > REPRINT
Reprint Any Receipt	Press MENU > MERCHANT > REPRINT > RECEIPT LOOK UP > SELECT REQUIRED LOOK UP CRITERIA
Settlement Inquiry	Press MENU > MERCHANT > ADMIN > SETTLE INQUIRY Enter required date [dd/mm/yyyy] and press ENTER
Settlement Cutover	Press MENU > MERCHANT > ADMIN > SETTLE CUTOVER Note: This can only be performed during your regular settlement window. Terminal will automatically perform Paymark settlement once per day. For further information about auto settlement window contact Paymark helpdesk.
Print (Shift) Totals	 Press MENU > MERCHANT > ADMIN > PRINT TOTALS Press NO to print without clearing totals OR Press YES to print totals and clear them for next shift
Send Offline Transactions	Press MENU > MERCHANT > ADMIN > SEND OFFLINE Note: Terminal will automatically send stored offline transactions when the terminal regains connection to the Paymark network.
Stored Totals	Press MENU > MERCHANT > ADMIN > STORED TOTALS

Print Current Configuration

• Press MENU > CONFIG > password > PRINT CONFIG

Terminal will print out configuration receipt with current network and other host and merchant settings.

Configuration Updates

Smartpay offers a range of value-add services like Smartcharge automatic credit card surcharging, Receipt Tipping and Tipping on terminal, Multi merchant, Currency Select EFTPOS and Pre-Authorisation.

From time to time Smartpay THD may need you to perform a CONFIG UPDATE on the terminal to apply functionality changes. To do this:

Press MENU > CONFIG > password > UPDATE CONFIG

Contact our sales team or THD to discuss activating/deactivating the value-added services on your EFTPOS terminal.

Network Comms Check

This check can be performed to verify the terminal has a working network connection.

• Press MENU > DIAGNOSTICS > COMMS TEST

Terminal screen will display process and display **COMMS TEST: OK** (and **CONNECTION: OK** if using IP) for a working connection or **DECLINED PLEASE TRY AGAIN** if the connection is not working.

Connection Icons

Connection icons can be viewed on the status bar at the top of the screen.

20/05/17 10:00	lıı. 🕮
20/05/17 10:00	
20/05/17 10:00	- 2 - In III
20/05/17 10:00	- ^ - III. 💷
20/05/17 10:00	- 0 - In. 💷

Not Connected - No comms connection detected. Check cables etc.

Connecting/Disconnecting - Displayed when connection is active.

Connected - Boxes are together when connection is made.

Sending - Back box is filled green when sending info.

Receiving - Front box is filled green when receiving info.

App Manager

Smartpay THD may require you to access App Manager to change comms type or update your terminal software. Making unauthorised changes in these settings may stop your terminal from working correctly. Please contact Smartpay THD for assistance before you attempt to use this menu.



Press CANCEL > FUNC (or *MENU*) to exit idle screen and access APP MANAGER MENU

• Press CLEAR or CANCEL to go back

Changing Comms Settings

Changes to comms being used by your EFTPOS terminal are made in the APP MANAGER menu. Please contact Smartpay THD for assistance before you attempt to use this menu.

- S800 can be configured for IP (Ethernet), Dial-up or IP with dial-up back-up
- Press CANCEL > FUNC (or MENU) > CONFIG > COMMS

The terminal requires a reboot after any comms changes. If this does not happen automatically, please perform a manual reboot by powering terminal off and back on.

System Settings

App Manager controls some system settings that can be applied over the whole terminal. Terminal needs to be rebooted to apply changes.

DISPLAY	Brightness Default setting is at 80% - to change the display screen brightness: • Press CANCEL > FUNC (or MENU) > SYSTEM > DISPLAY > BRIGHTNESS Colours Default setting is black text on white background - to change the display screen background colour between white and black
	• Press CANCEL > FUNC (or MENU) > SYSTEM > DISPLAY > COLOURS
POWER OPTIONS	Screensaver Default setting is when enabled is 30 seconds – to enable/disable screensaver and set timeout period (set between 30 seconds and 180 seconds). • Press CANCEL > FUNC (or MENU) > SYSTEM > POWER OPTIONS > SCREENSAVER Do not enable screensaver if your terminal is being used with POS or ECR in integrated/ interfaced mode.
KEY BEEPS	 Enable or Disable key press noise. Press CANCEL > FUNC (or MENU) > SYSTEM > KEY BEEPS

